



***Instructions for Installing
A No Gauge Kit
#38521.0000***

INTRODUCTION

This instruction covers the removal of the mechanical sight gauge from 1.0 and 1.5 Gallon TF Servers.

KIT CONTENTS

ITEM	PART NO.	QTY.	DESCRIPTION
1	35131.0001	1	Cap Nut, Faucet
2	38339.0000	1	Disk, Silicone
3	38520.0000	1	Instruction Sheet

INSTRUCTIONS TO REMOVE THE MECHANICAL SIGHT GAUGE

1. Unscrew and remove the lid assembly from the TF server (FIG. 1).
2. Empty any liquid in the server.

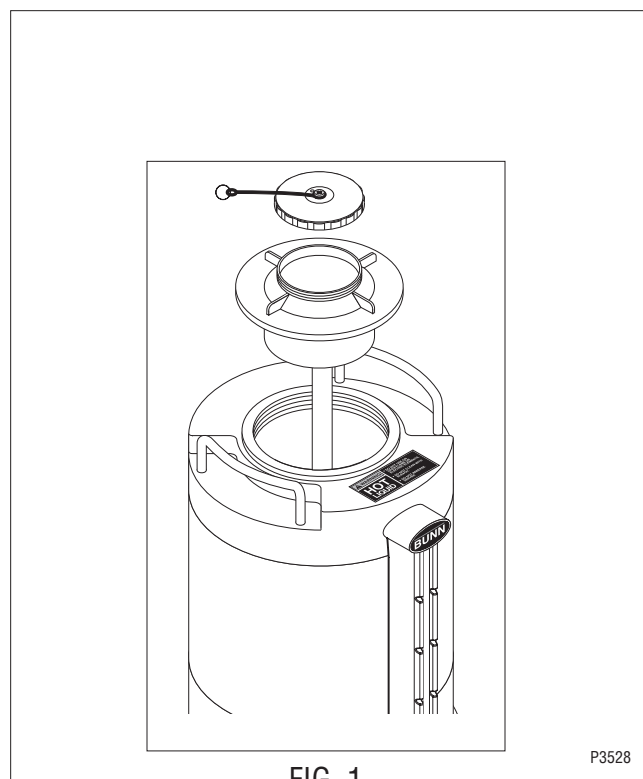


FIG. 1

P3528

BUNN-O-MATIC CORPORATION


POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

INSTRUCTIONS (Cont.)

- Slide the sight gauge shroud upward and off.
(FIG. 2)

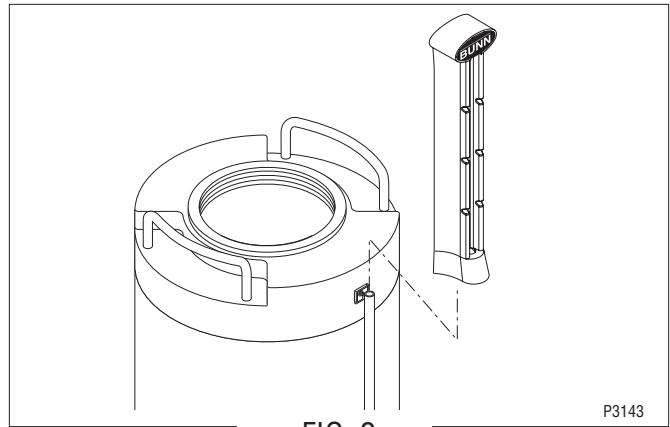


- Use an adjustable wrench or any other appropriate tool to loosen the nut at the bottom of the sight gauge. (FIG. 3)
- When the nut is loose, remove the sight gauge assembly (nut, ferrule, o-ring, and sight gauge) from the faucet spout.

NOTE: The use of needle nose pliers may be necessary to remove the o-ring from the faucet spout.

WARNING: Use care not to damage the faucet spout if tools are used to remove items in the faucet spout.

- Remove the screw that was holding the top of the sight gauge shroud in place.

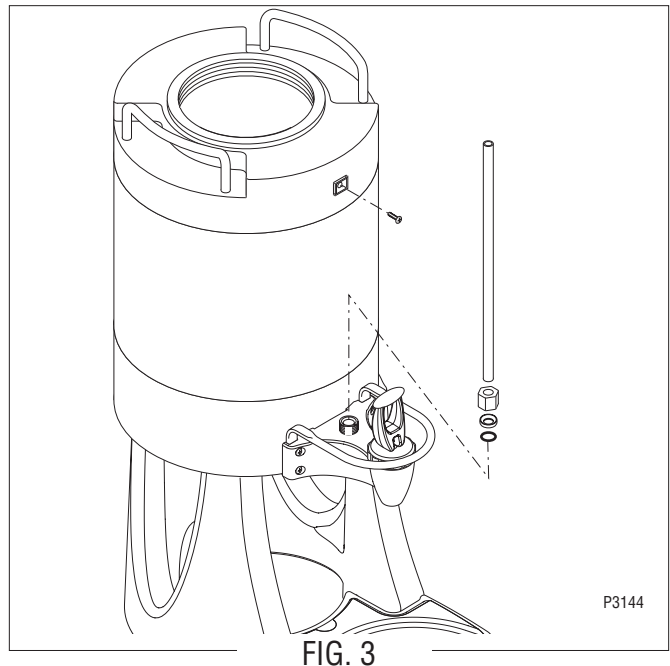

- Place a new silicone disk (2) into the faucet spout and install the replacement cap nut (1) onto the sight gauge outlet on the faucet spout and tighten. (FIG. 4)

