

# ITCB Calibrating the Sprayhead Flow Rate



This function allows the operator to test and enter the actual flow rate of the sprayhead(s).

- Step 1:** Place a measuring container with a minimum capacity of 60 ounces beneath the funnel of the brewer. Water can also be dispensed into the server and then into the measuring container.
- Step 2:** Press and hold the right hidden switch to enter level 2 programming. Continue to press the right hidden switch until the display reads "Calibrate Flow?".
- Step 3:** Press YES to advance to the "Spray Head Cal?" function screen.
- Step 4:** Press YES. The display will read "Container Ready?" If the container is under the funnel, press YES. The display will read "Calibrate Spray...Press Brew to Start".
- Step 5:** Press and release the BREW switch (on the side to be calibrated for Dual Brewers). The display will read "Calibrate Spray...60 Sec to Finish". The 60 second timer on the display will count down to zero. When the counter reaches zero, the display will change to OZ, along with the existing ounces per minute.
- Step 6:** Measure the amount of water in the container and using the (-) or (+), adjust the amount on the display to match the amount in the container. Then press DONE.
- Step 7:** The display should now read "New Spray Flow" along with the correct flow rate of the sprayhead in ounces per minute. After 5 seconds, the display will return to the "Calibrate Flow?" screen.

