



JDF-2,2S,4,4S

Resistor Installation Kit

#40770.1000

Introduction:


These instructions show the correct location for installing the resistor to the relay in 230V machines.

Kit Contents:

40770.0000	1	Resistor
40927.0000	-	Instructions

Instructions:

1. Disconnect power to the machine.
2. Disconnect the wires from terminals **0** and **1** on the relay.
3. Install the resistor to terminals **0** and **1** on the relay, as shown below.
4. Re-connect the existing wires back to the piggyback terminals on the resistor.
5. Connect machine back to the power supply.

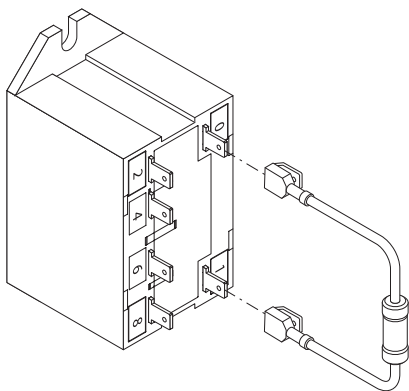

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644