

# BUNN®

## CDBCF-DV & AXIOM BrewWISE DELIMING KIT #44242.1000


### WARNING - Very Hot Water!

#### KIT CONTENTS:

00674.0000 Cleaning Brush  
01188.0000 Deliming Spring (20" long)  
02766.1001 Seat Cup Kit (Set of 5)



**WARNING - Do NOT use spring to clean sprayhead! Order 38227.0000 Spray-head Deliming tool.**

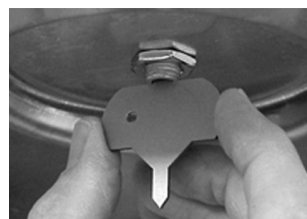

1. Disconnect power from the brewer and allow faucet to cool to touch (could take several hours). **NOTE:** It is not necessary to disconnect the water source for this procedure.



2. Run water out of faucet until flow stops. Elevate the front of the brewer about 1" so water is confined to tank.




3. Remove handle and bonnet nut assembly from faucet by rotating bonnet nut counter clockwise, then lift off. The nut is only hand tight but may need the use of a hand tool first time it is taken off. **NOTE:** Exercise caution as any residual water discharged may be **HOT**.



4. Using the bristle brush (use no other tool), clean the faucet body to remove any lime scale.



5. Thread the deliming spring through the open top of faucet and into the path that leads to the tank. A properly inserted deliming spring will extend 3 inches from the faucet, ensuring that it reaches the tank. Run back and forth several times until path is free of lime. **NOTE:** Do Not use deliming spring to clear sprayhead tube!

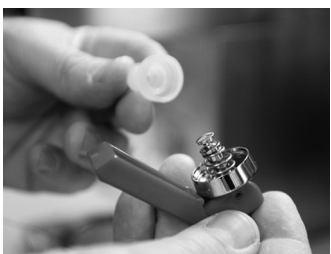

6. Remove the old faucet seat cup from the handle and bonnet assembly and replace the seat cup with a new one. Reinstall the seat cup to the faucet assembly by pressing firmly to ensure a proper connection (should interlock). Reinstall the handle and bonnet nut assembly rotating the nut clockwise to hand tight.



7. Return the brewer to level. Restore power to the brewer. Turn ON the main warmer to allow the tank to refill. Check for leaks around the faucet.



8. Run water through the faucet until no signs of dislodged lime scale are visible. A properly functioning faucet will dispense 5 ounces of water in less than 15 seconds. If faucet flows more slowly, call BUNN Technical Services at 800-286-6070.

## BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

