



Instructions for Hopper Lid & Handle Lock

INTRODUCTION:

These kits allow for the installation of a lid lock and (or) handle lock for the Ultra 2.

KIT CONTENTS:

#34996.0000 Lid Lock & Cover - White

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	35759.0002	Bracket, Hopper
2	1	35905.0000	Cover, Lid Lock
3	1	29734.0000	Lock, W/Keys
4	2	01384.0000	Screw, 8-32 x 1.5

#34996.0001 Lid Lock & Cover - Black

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	35759.0001	Bracket, Hopper
2	1	35905.0001	Cover, Lid Lock
3	1	29734.0000	Lock, W/Keys
4	2	01384.0000	Screw, 8-32 x 1.5

#34996.0002 Lid Lock & Cover with Lock Bar - White


ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	35759.0002	Bracket, Hopper
2	1	35905.0000	Cover, Lid Lock
3	2	29734.0000	Lock, W/Keys
4	2	01384.0000	Screw, 8-32 x 1.5
5	2	34308.0000	Bar, Handle Lock

#34996.0003 Lid Lock & Cover with Lock Bar - Black

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	35759.0001	Bracket, Hopper
2	1	35905.0001	Cover, Lid Lock
3	2	29734.0000	Lock, W/Keys
4	2	01384.0000	Screw, 8-32 x 1.5
5	2	34308.0000	Bar, Handle Lock

#34996.0004 Lock Bar

ITEM	QTY	PART NUMBER	DESCRIPTION
3	1	29734.0000	Lock, W/Keys
5	2	34308.0000	Bar, Handle Lock

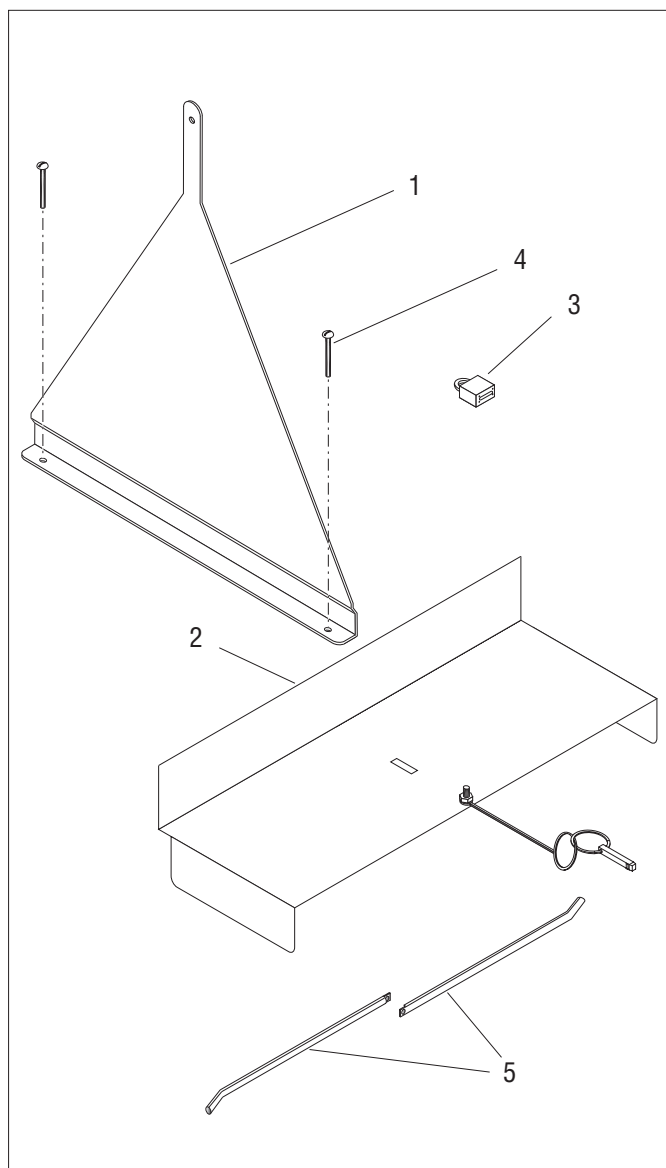

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

INSTRUCTIONS TO MOUNT THE LOCK KIT:

Warning: Disconnect the power source before the removal of any panel or replacement of any component.

1. Disconnect the lamp cords and remove the lids from the hoppers.

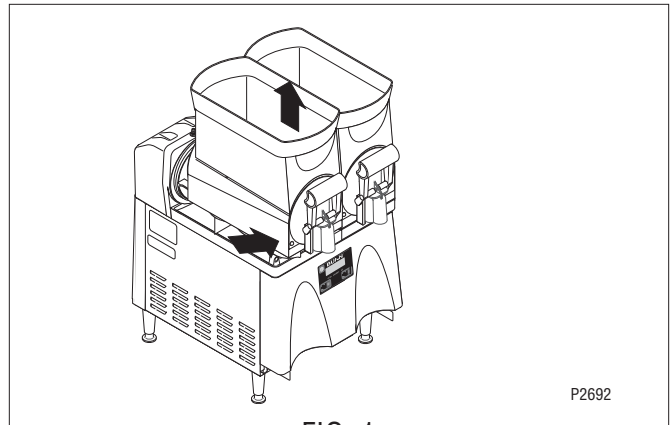


FIG. 1

2. Remove the left and right hoppers by lifting up and out. See Fig. 1.

3. Using a flat head screw driver, carefully pry up and remove the plastic plugs from the Hopper/Drip Tray Trim. See Fig. 2.

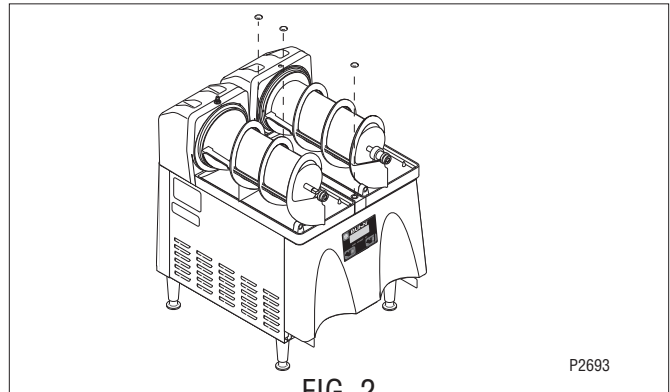


FIG. 2

4. Using a screwdriver, remove the two screws that fasten the Hopper/Drip Tray trim. (Located between the two hoppers.)

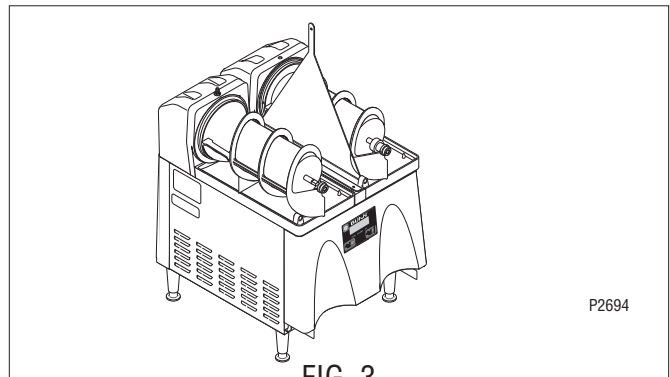


FIG. 3

5. Place the Hopper Bracket (1) on top of the Hopper/Drip Tray Trim. See Fig. 3.

6. Using the screws provided with the Hopper Lock Kit, fasten the Hopper Bracket to the Hopper/Drip Tray Trim.



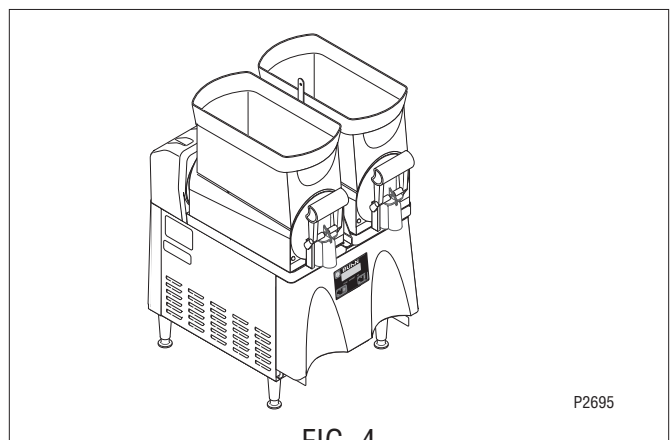


FIG. 4

7. Reinstall the hoppers.

INSTRUCTIONS TO MOUNT THE LOCK KIT (CONT.)

8. Place the lids back onto the hoppers and plug the lid lamp cord back into the Ultra.
9. Using the slot in the top of the Locking Cover (2), slide the Locking Cover over the Bracket and into place onto the top of the hoppers. See Fig. 6
10. Insert the Master Lock (3) or use the locking pin (attached to the lid lock cover) to secure the hopper lock kit. See fig. 7.

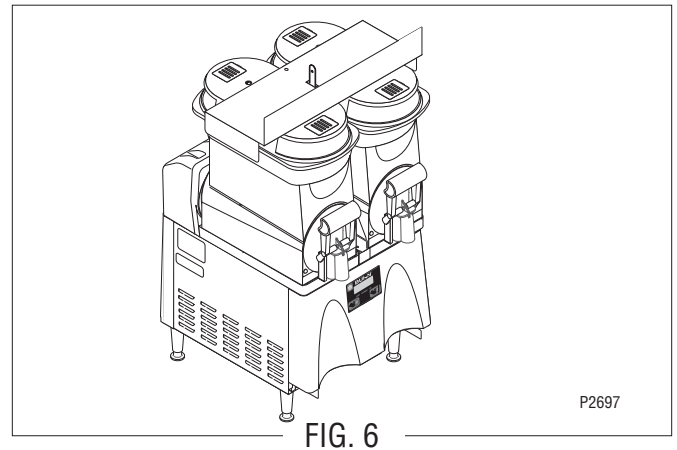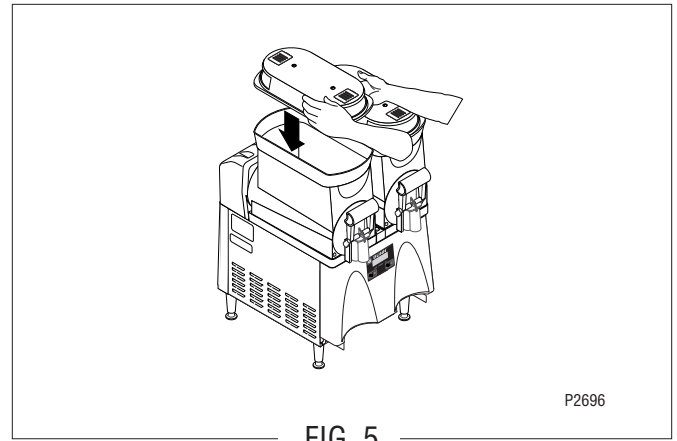

INSTRUCTIONS FOR INSTALLING THE LOCK BAR

Warning: Disconnect the power source before the removal of any panel or replacement of any component.

1. The handle Lock Bar (5) is a two piece lock kit. Insert one piece of the bar through the left faucet handle. Insert the second piece through the right faucet handle. See Fig. 7.
2. Slide the two piece handle lock kit together until the ends interlock and the holes align.
3. Insert the Master Lock (3) through the hole in the lock bar to secure the handles.

