



JDF-2S, JDF-4S Portion Control Door Kit Installation Instructions

INSTRUCTIONS:

1. Install door cover by first plugging the door harness into light connector, and into J6 on Circuit Board located on front panel.
2. Install each individual ribbon cable into appropriate location (Steps 3 - 7) on Circuit Board located on front panel. Left/Right determined by facing front of machine. (Fig. 1)

JDF-4S

3. Station 1 (Left Left) - J2
4. Station 2 (Left Middle) - J3
5. Station 3 (Right Middle) - J4
6. Cold Water - J1
7. Station 4 (Right Right) - J5

JDF-2S

- Station 1 (Left) - J2
- Station 2 (Right) - J3
- Station 3 - N/A
- Cold Water - N/A
- Station 4 - N/A

8. Ribbon cables should not be twisted when installed. (Fig. 2)

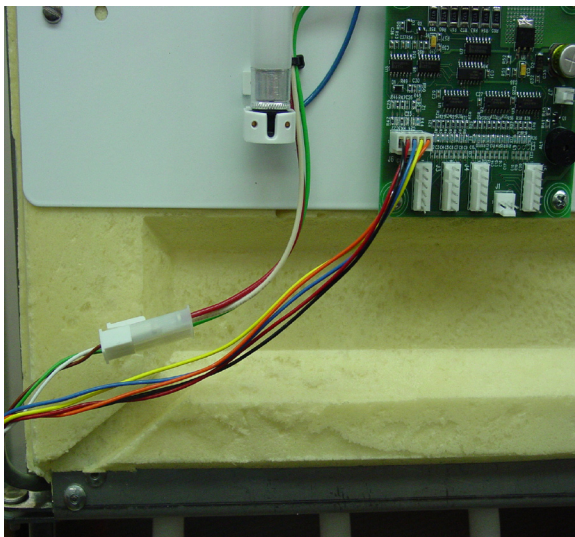


FIG. 1

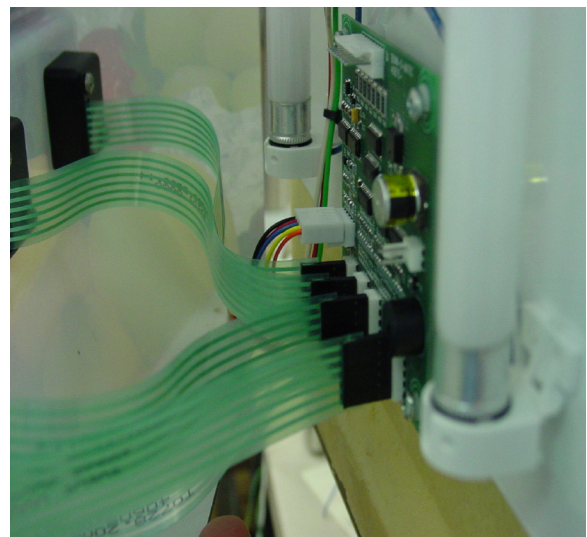


FIG. 2

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

