


BUNN®

AxiomBrewWISE RFID REPLACEMENT INSTRUCTIONS



STEP 1. Slip the collar assembly over the handle, then over the neck of the decanter.

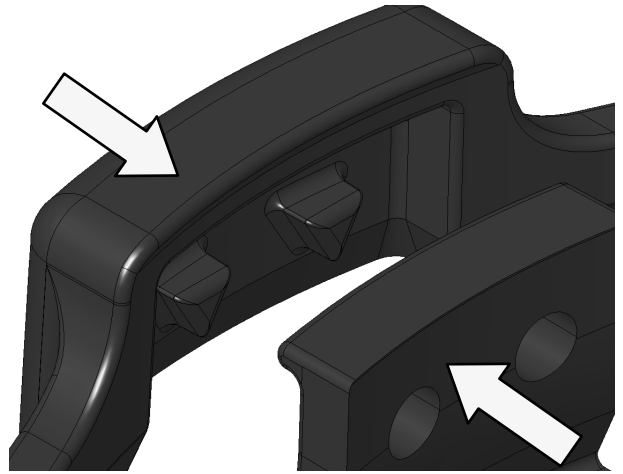

STEP 2. Align the two tabs on the strap with the two holes in the collar. Press the two parts together.



STEP 3. Rotate the assembly down until it “clicks” into position.

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

