

BUNN®

AXIOM/CDBC DISPENSE TUBING KIT 41499.1001

INTRODUCTION

This kit will replace the tubing between the tank and the dispense solenoid.

KIT CONTENTS


1. 1 39331.0000 Tube, Silicone .50ID X 5.0 Long
2. 1 12422.0005 Clamp, Snp-12
3. 1 12422.0009 Clamp, Snp-14
4. 1 41499.0001 Instructions

INSTRUCTIONS

WARNING – UNPLUG THE BREWER AND ALLOW TO COOL BEFORE PROCEEDING.

Refer to illustration

1. Remove top and front covers.
2. Drain tank till water level is below tubing outlet.
3. Remove old tubing.
4. Install one end of the new tubing on the tank outlet fitting.
5. Slip the Clamp (Snp-14) over the tubing, and hand tighten on the tank fitting.
6. Slip the Clamp (Snp-12) over the free end of tubing.
7. Install free end of tube and second clamp over solenoid fitting (4), and hand tighten.
8. Connect brewer to power source and allow to refill, check for leaks.
9. Reinstall covers.

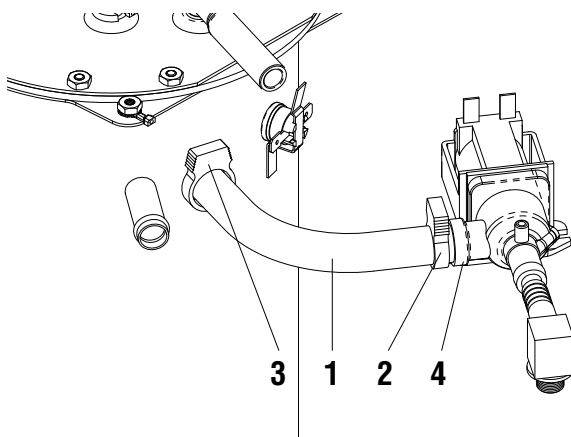

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

