

DUAL SH Instructions for Installing A Hot Water Dispense Kit #38763.0000

INTRODUCTION

This kit provides the necessary parts and instructions for mounting an optional Hot Water Dispenser.

CONTENTS


20201.1601	1	90° Elbow, Tin Plated .375 Barb
12422.0001	2	Clamp, Hose-Snap Type
20976.0066	1	Tube, Silicone .38ID x 48L
01317.0006	4	Screw, Trh Sltd Blk
00970.0000	4	Nut, Keps #8-32 Zinc Plated
38443.0000	1	Spacer, Hot Water Box
34373.0003	1	Dispense Assy, HW Side Mt.
38762.0000	1	Instructions, HW Dispense Kit
38849.0000	1	Template

INSTRUCTIONS

- 1. Turn off the water to the unit.
- 2. To drain the tank, run brew cycles without coffee grounds until no more water comes out.
- 3. Disconnect the unit from the power supply. Allow the remaining water in the tank to cool.

WARNING: The tank should be drained, and the unit disconnected from the power supply before removing any panels. Any water remaining in the tank should be allowed to Figure 1 cool before proceeding to the next step.

- 4. Remove the top cover and front access panel.
- 5. After allowing sufficient time for the water to cool, carefully remove the plug from the center output in the tank and install the 90° Elbow #20201.1601 with the barb pointing straight down.
- 6. Attach the provided template #38849.0000 to the side of the unit as shown in Fig. 1. Drill 5 holes as indicated by the template 4 holes 3/16" diameter, 1 hole 3/4" diameter.
- 7. Remove the template and deburr all holes.
- 8. Attach the Hot Water Box and Spacer according to instruction sheet #34372.0001.
- 9. Attach the #20976.0036 Tube to the tank and faucet adaptor in the Hot Water Box using the #12422.0001 Clamps.

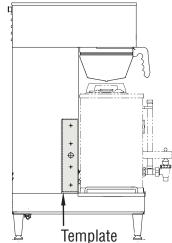

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227 SPRINGFIELD, ILLINOIS 62708-3227 PHONE: (217) 529-6601 FAX: (217) 529-6644