

# BUNN®

ULTR152400  
OFF OFF

ULTRA

GOURMET

ICE



在常态状态下长按GOURMET键进入程序



# BUNN®

CLEANING GUIDE ?  
NO YES

ULTRA GOURMET ICE

进入此界面后再按GOURMET键进入设定冰粒度

# BUNN®

SET THICKNESS ?  
NO YES

此界面为设置冰粒度状态

ULTRA GOURMET ICE



# BUNN®

SET THICKNESS ?  
NO YES

ULTRA GOURMET



按ICE确认进入设定

通过+-来设定冰粒度数值，统一设置成14，然后按GOURMET确认


LEFT 12

ULTRA GOURMET ICE

ULTER代表-

ICE代表+



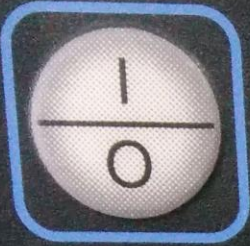

# BUNN®

LEFT 14

左缸冰粒度数值为14






# BUNN<sup>®</sup>

RIGHT 12

ULTRA G...ET ICE

右侧缸同样设置为14后确认即可



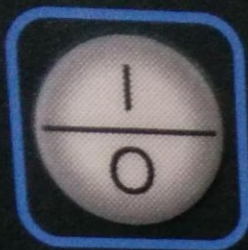

**BUNN**<sup>®</sup>



ULTRA GO ICE



按确认即可





# BUNN®

TEST AUGERS ?  
NO YES

ULTRA GOURMET ICE



设定好后连续按GOURMET键至退出程序



**BUNN**<sup>®</sup>

ULTRA II  
VERSION # 01.10

ULTRA GOURMET ICE  
如图显示为退出程序



BUNN®

MARCH 24, 2014  
OFF OFF

待屏幕跳转为时间即可，如图所示