



## To extract an Ultra NX Software .ZIP file to a USB Flash Drive

### To perform a software upgrade:


- 1) Save the Ultra NX V05.00 software .ZIP file to your Desktop .
- 2) Insert the USB Flash Drive you want to put the software onto into your computer.
- 3) Right click on the software .ZIP file on your computer.
- 4) From the list of options that appear, select “Extract All...” and left click.

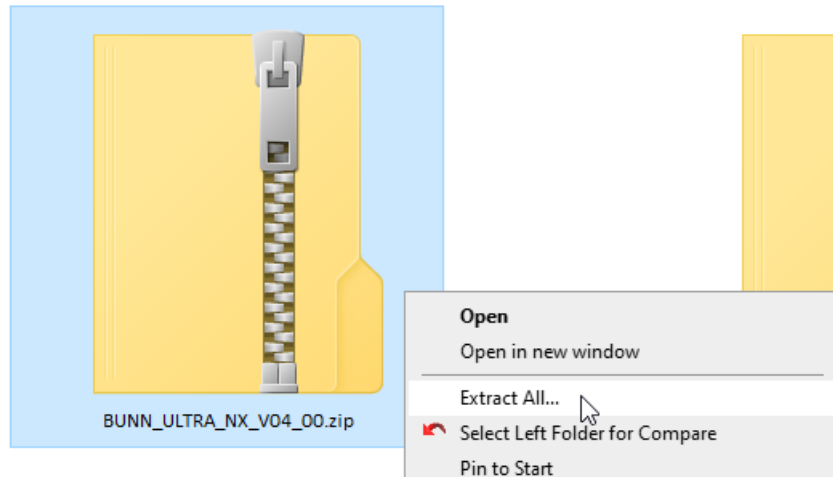


- 5) In the file extraction window that pops up, left click on the word “BROWSE”.

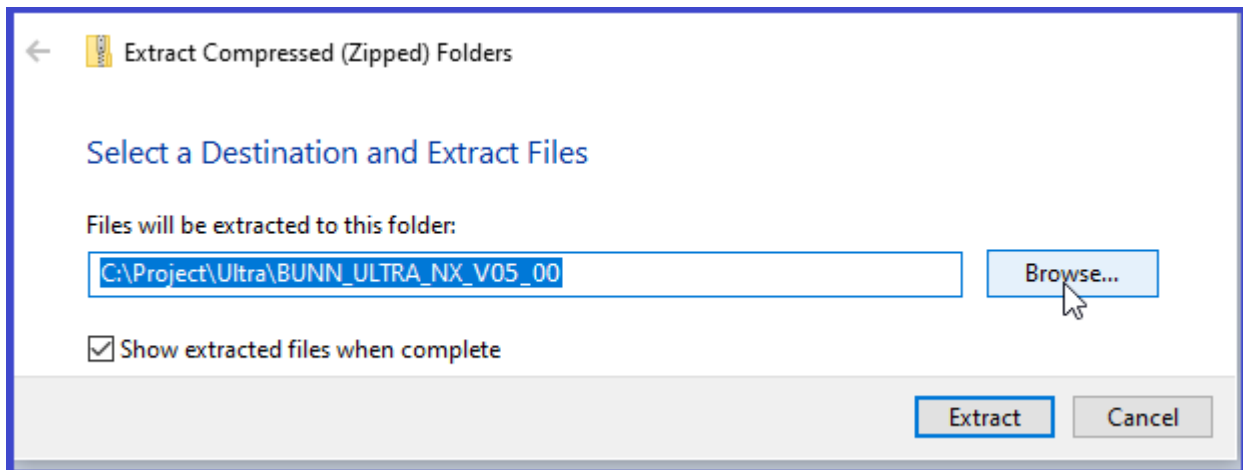


- 6) Navigate to the USB Flash Drive you want to deploy to. It likely will be some drive letter such as “D:”, “E:”, or “F:”. Left click on the desired USB device, and then left click on “Select Folder”.

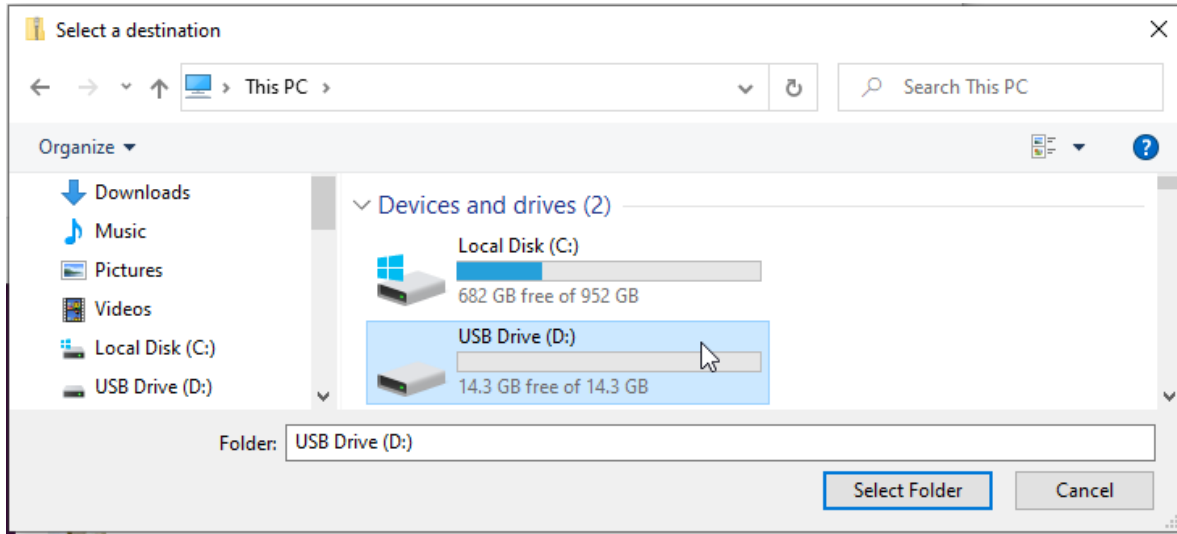

- 7) With that done, the USB flash drive should show up as the location where the files will be extracted to, as in the image below. If this all looks okay, you can left click on “EXTRACT”.

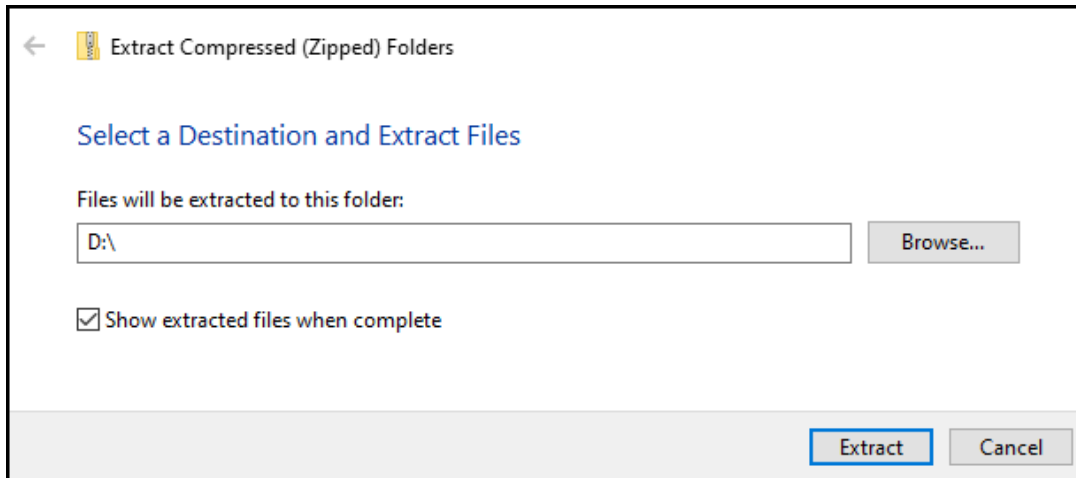

- 8) The software package should now be loaded onto your USB Flash Drive, such as in the below example.

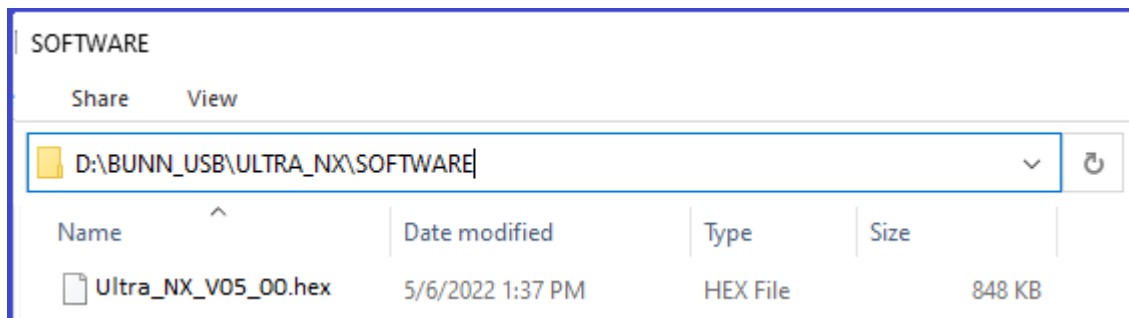

- 9) Safely remove your USB Flash Drive from your computer. You may now proceed to upgrade your Ultra NX unit(s) as needed with the updated USB device.